

ASSEMBLY INSTRUCTIONS

HEADBOARD WITH WALL AND BED BASE FASTENING

20 min



*Use drill at minimum speed



(x4)

Bracket




(x8)

Wall fastening
screw 20 mm



(x4)

Bed base
fastening screw
50 mm




(x4)

Adhesive

1. Instructions to be carefully read and kept.
2. Ensure all parts are present and in good condition.
3. Clean away a space for the assembly.
4. Never force the joints.
5. Dispose of packing materials according to sorting instructions.

WALL FASTENING


- 1** Attach the brackets to the pre-drawn points on the headboard.

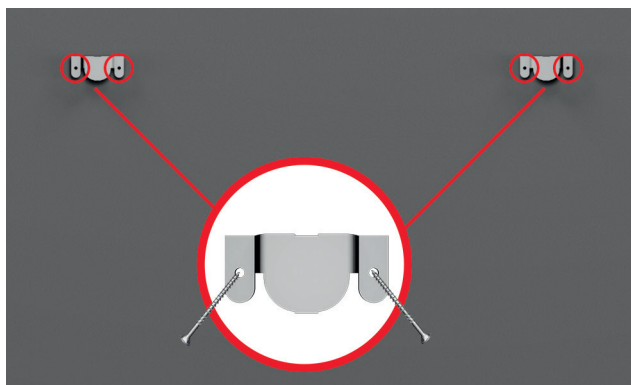

- 3** Hook the brackets one into the other.




- 2** Attach the brackets to the wall, according to the headboard dimensions, and use the appropriate screws **or** the 4 adhesive strips provided.

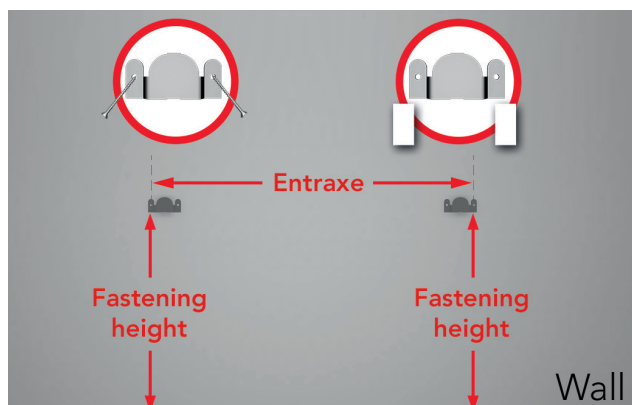

Headboard width	160	180	200
Fastening height	110		
Centre distance between outside holes	142	162	182

- 4** If the feet can be adjusted, then change the height.

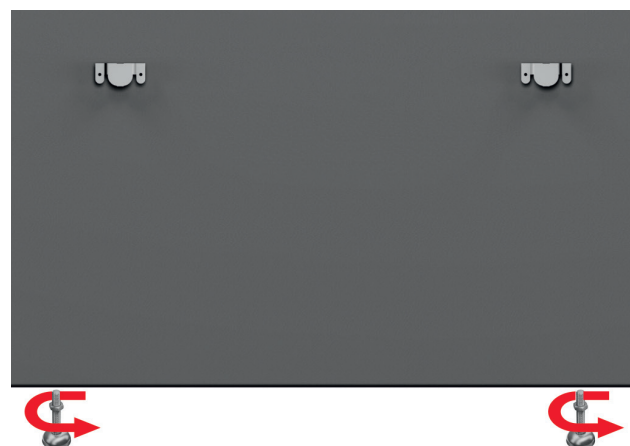


The pictures may differ slightly from your headboard and must be regarded as a schematic drawing.


HEADBOARD WITH WALL AND BED BASE FASTENING

BED BASE FASTENING

- 1** Centre the headboard against the bed base and hold firmly in place throughout the whole operation.

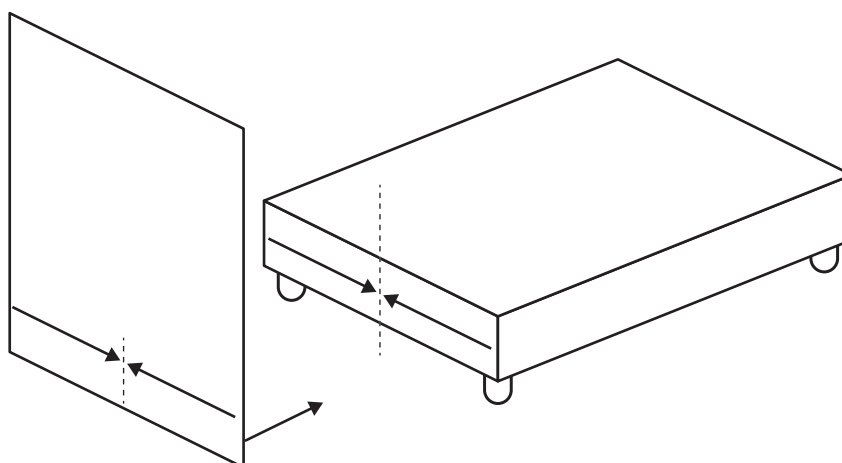

- 2** To place the screws:
- Width: follow the line present on the back of the headboard.
 - Height: measure the heights (H and h) of the bed base, add together and mark where screws should be placed.

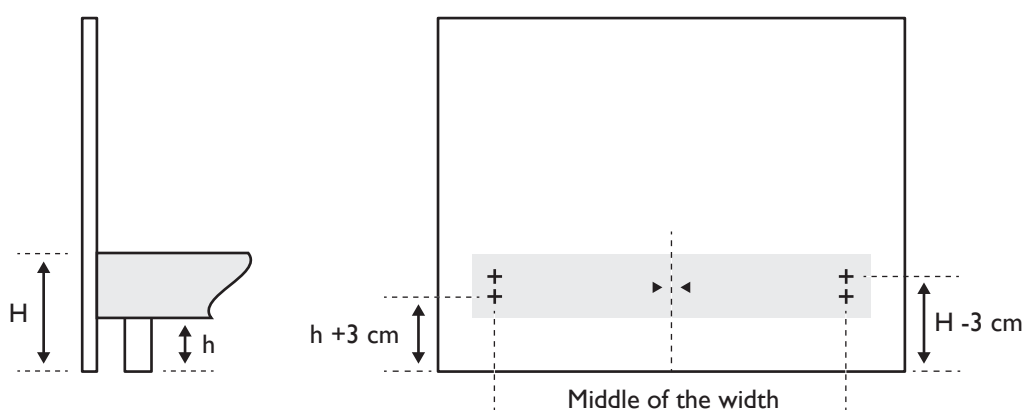

- 3** Screw in the 4 screws on the marked places using a cross-head screwdriver or a drill (use on minimum speed).